

---

# Face Unit for F14E-Series Chassis

## FA-FACE-F14E User's Manual

CONTEC CO.,LTD.

 
---

Thank you for purchasing the CONTEC product.


The product consists of the items listed below. Check, with the following list, that your package is complete. If you discover damaged or missing items, contact your retailer.

### Product Configuration List


- Face Unit [FA-FACE-F14E] ...1
- Key ...2
- Screws with washer for fastening the top (M3 x 6) ...2
- Flat-head screws for fastening the bottom (M3 x 5) ...2
- User's Manual ...1

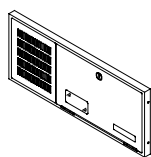

Face Unit  
[FA-FACE-F14E]

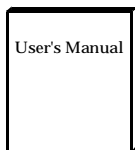 

User's Manual

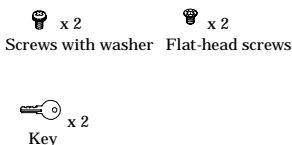 

Screws with washer

Flat-head screws

Key

## About the Chassis

This product is a face unit to be mounted on the chassis of the FA-UNIT-F14 E series (FA-UNIT-F14BE, FA-UNIT-F14ME).

This unit serves as a key-locking cover for the switches and drives, safeguarding the FA-UNIT-F14 E series from unauthorized operation.

## Features

Attaching a key-locking cover to the front of the chassis for the FA-UNIT-F14 E series prevents its switches and drives from unauthorized access and operation.

## Specification

| Item                    | Specification                            |
|-------------------------|--|
| External dimensions(mm) | 427(W) x 18(D) x 177(H) (No protrusions) |
| Weight                  | About 1.1kg                              |
| Acceptable chassis      | FA-UNIT-F14BE, FA-UNIT-F14ME             |

# Installing method


Attach this product to the chassis of the FA-UNIT-F14 E series as follows.

## Preparation

- (1) Turn off the power switch on the chassis.
- (2) Unplug the power cable of the system unit from the wall outlet.


## Attaching the chassis to the FA-UNIT-F14 E series

- (1) Remove the screws fastening the top cover of chassis, then remove the cover. When loosening the screws, use the appropriate type of screwdriver that fits the screw head.

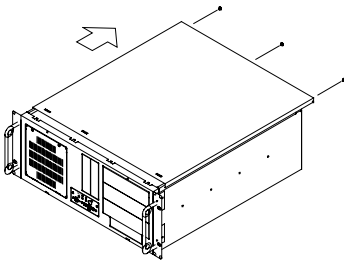

- (2) Fit the chassis in the front of it and fix it with four screws.

Use the screws with washer and Flat-head screws to fasten the top and bottom, respectively.

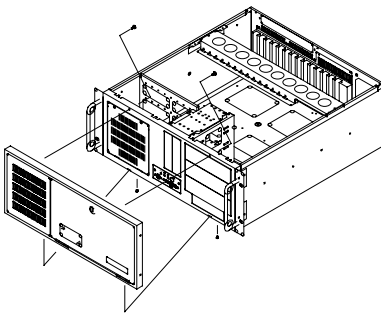

- (3) In the reverse order of (1), fix the top cover to its original position.
- (4) Adjust the rack-mount bracket on the system unit as required to fit the face front.

# External dimensions

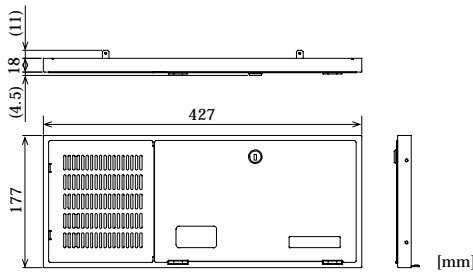 


Figure 1 External dimension

## FA-UNIT-F14 E with the chassis Attached

Attaching this product to the chassis of the FA-UNIT-F14 E series increases the depth of the chassis 18 mm.

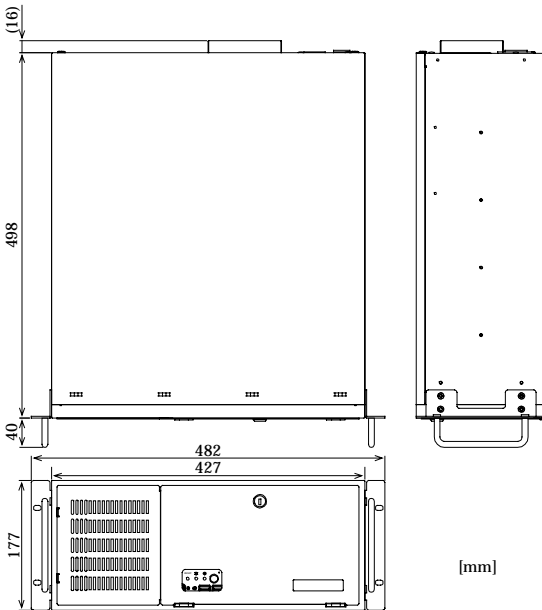 


Figure 2 Major Dimensions of FA-UNIT-F14ME with FA-FACE-F14E  
< FA-UNIT-F14ME + FA-FACE-F14E >

# Safety Precautions

Understand the following definitions and precautions to use the product safely.

## Handling Precautions

### CAUTION

---

- Turn off the power switch on the chassis before attaching this product.
  - Do not modify this product.  
CONTEC will bear no responsibility for any problems, etc., resulting from modifying the product.
  - CONTEC CO., LTD. makes no commitment to update or keep current the information contained in this document. The information in this document is subject to change without notice.
  - All relevant issues have been considered in the preparation of this document. Should you notice an omission or any questionable item in this document, please feel free to notify CONTEC CO., LTD.
  - Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using this product.
- 

Copyright 2005 CONTEC CO., LTD. ALL RIGHTS RESERVED.

---

**CONTEC CO., LTD.**

August 2005 Edition

3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

Japanese <http://www.contec.co.jp/>

English <http://www.contec.com/>

Chinese <http://www.contec.com.cn/>

A-51-086 (LYFF251)

[08252005]

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.

---